

How to pre check, start and run the Husqvarna floor saw 600mm our code FSP24



1. Throttle lever to be in the middle position
2. Engage/disengage lever to be in the disengage position
3. Make sure red stop button is in out position by twisting or pulling
4. Use the choke lever as needs subject to how cold the machine is
5. Travel speed lever must be in the stop position
6. Blade must be fitted and the depth setting set to zero once blade is fitted, but wind the blade off the floor before starting
7. Crank engine over on the key for no more than 3 seconds each time until it starts
8. Don't cut down more than 70mm on each pass or the drive belt may break
9. Make sure max amount of water is used when cutting
10. If the blade jams into the cut it can also break the belt so make sure the machine is not pushed when in a cut
11. Try to run the saw for more than 2 hours after starting to recharge the battery back up
12. Make sure turn the ignition key off after use and don't leave it on or the battery will flatten
13. Keep the jump pack supplied on charge in site office at all times so full when need to use
14. Use the jump pack to start the machine if you have flattened the battery and run engine for at least 2 hours to recharge the battery.